




3550 NW 113th Ct Doral, FL 33178
+1-786-953-6706

1. Turn off the unit and remove the battery from C&H remote control.
2. Cut power to the unit (turn off the breaker or pull the disconnect) wait 5 minutes.
3. Once the unit is fully de-energized, place batteries back into the C&H remote control then re-energize the unit.
4. Within the first 60 seconds of the unit being energized, press both the power and fan button at once for 10 seconds.
5. Change to "2" on the C&H remote control.
6. Press "OK"
7. Press and hold power for 2 seconds, the remote should show "CH".
8. Press the  arrow to "1".
9. Press "OK" and the display should flash a "1" to confirm the proper command was entered.
10. Press and hold power for 2 seconds and the remote will go back to "CH"
11. Press and hold the fan and power button for 10 seconds to finalize